

Portabel saxlyft

Portable scissor lift

2500 KG



Artikelnummer

513949



Kontaktinformation

Verktysboden Erfilux AB
Källbäckstrydgatan 1
SE-507 42 Borås
Telefon: 033-202650
Mejl: info@verktysboden.se

Miljöskydd / Skrotning

Återvinn önskat material, släng det inte bland hushållssoporna. Alla maskiner, tillbehör och förpackningar skall sorteras och lämnas till en återvinningscentral och där kasseras på ett miljövänligt sätt.



Allmänna säkerhetsföreskrifter

Vid arbete med maskiner bör följande punkter alltid beaktas. Ta även hänsyn till arbetsplatsens säkerhetsföreskrifter och respektera alla de lagar, regler och förordningar som gäller där maskinen används.

- Städa ofta. Damm, avfall och bråte på en arbetsplats ökar risken för olycka, brand och explosion.
- Arbeta inte i mörker eller dålig belysning.
- Förvara aldrig explosiva eller brandfarliga vätskor och gaser inom arbetsområdet.
- Håll barn utanför arbetsområdet.
- Var särskilt uppmärksam på maskinens varningssymboler.
- Använd inte maskinen om du är trött eller påverkad av droger, alkohol eller medicin.
- Använd vid behov, skyddsutrustning såsom andningsskydd, skyddshandskar, hörselskydd och skyddsglasögon.
- Bär för ändamålet lämpliga arbetskläder och halksäkra skor. Använd hårnät om du har långt hår, bär inte smycken eller löst sittande kläder som kan fastna.
- Låt aldrig din vana vid maskinen leda till oförsiktighet.
- Kontrollera att alla skydd sitter på plats och är i god funktion. Kontrollera att alla maskindelar, är hela och sitter korrekt monterade.

Säkerhetsinstruktioner

Tillverkaren tar inget ansvar för olyckor och skador på personer eller utrustning som orsakats av felaktig användning.

Elinstallation ska utföras av elektriker med behörighet för aktuellt arbete. Följ instruktioner och varningstexter om installation, användning och underhåll i denna manual. Låt manualen finnas i närheten av utrustningen hela tiden.

VARNING

- Överskrid inte den högsta tillåtna lastkapaciteten (2500 kg).
- Lyft alltid mot den tyngsta delen av bilen. Vanligtvis med pumpenheten placerad bakom bilen när motorn är placerad fram.
- Fordonet ska vara avstängt när det hissas upp i lyften.
- Se till så att säkerhetsspärrarna är på utsidan.
- Låsstängerna måste kunna röra sig fritt längs botten av sina kanaler; de får inte vara uppe i luften när du höjer ramperna (om de gör det är det mest troliga problemet att låsstångens bult är överdragen).
- Placera ramperna under fordonet. Kör eller rulla aldrig upp på ramperna.
- Försök inte lyfta ett fordon som ligger direkt på rampen i bottenläget. Lyften kräver lite utrymme mellan marken och ditt fordon för att bygga upp tillräckligt med tryck för att lyfta det.
- Se till att inga personer befinner sig i arbetsområdet vid höjning och sänkning av lyften.
- Gå ej under lyften innan säkerhetsspärren har gripit in.
- Det är inte tillåtet att stå eller klättra på lyften eller fordonet, eller att placera verktyg, materiel eller andra föremål på dessa.
- Elskåp och ledningar ska skyddas från vatten.

OBS

Läs igenom användarmanualen noggrant före användning.


Försäkra dig om att alla användare läser och förstår denna manual.

Lyften är endast godkänd för installation och användning inomhus. Utomhusinstallation är förbjuden.

Monteringsanvisning



Montera fast plattan med hjulaxel och uttag för handtag på baksidan av pumpenheten. Använd de medföljande 4 skruv och muttrarna.

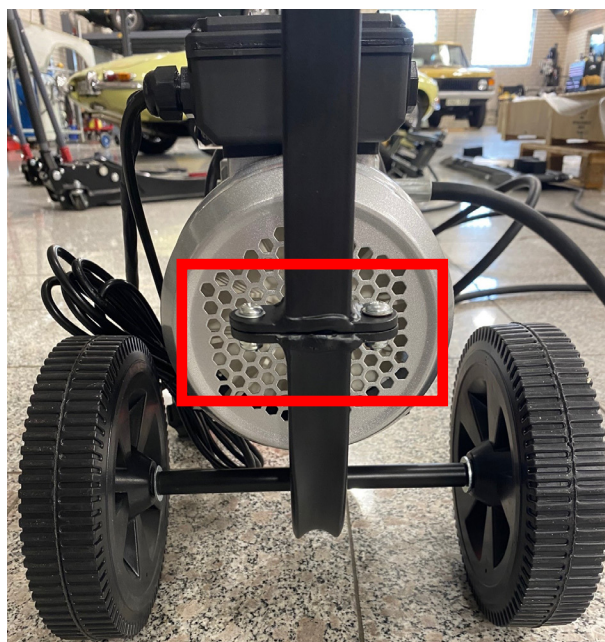

Montera på handtaget med de medföljande två skruvarna, muttrarna och brickorna.



Montera på hjulen. Sätt först brickan på hjulaxeln, sedan hjulet med den konkava sidan utåt. Fäst sedan hjulet med låsringen.



Ta bort den gulla pluggen från pumphuset och fäst hydraulslangen. **Kontrollera så att packningen inte sitter fast på pluggen.** Dra åt ordentligt.



Koppla hydraulslangen till de båda lyftramperna med snabbkopplingarna. **Kontrollera så det sitter ordentligt.**



Fyll på hydraultanken med ca 4 liter hydraulolja, VG32.


För mer information om montering och användning se våra filmer på verktygsboden.se

Instruktioner

Lyft: Se alltid till att fordonet är korrekt placerat på lyftrampen. Lyft upp ramperna med  på styrenheten.

Sänkning: Lossa säkerhetsspärrarna. Sänk ramperna med  på styrenheten.

Parkeringsläge: Sänk  tills säkerhetsspärrarna låser. Lyftrampen är nu fixad.

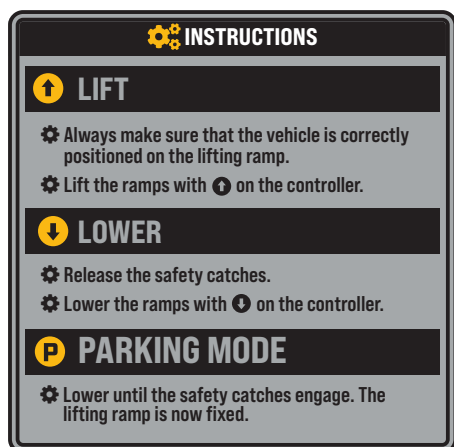

VARNING

- Överskrid inte den högsta tillåtna lastkapaciteten (2500 kg).
- Lyft alltid mot den tyngsta delen av bilen. Vanligtvis med pumpenheten placerad bakom bilen när motorn är placerad fram.
- Fordonet ska vara avstängt när det hissas upp i lyften.
- Se till så att säkerhetsspärrarna är på utsidan.
- Låsstängerna måste kunna röra sig fritt längs botten av sina kanaler; de får inte vara uppe i luften när du höjer ramperna (om de gör det är det mest troliga problemet att låsstångens bult är överdragen).
- Placera ramperna under fordonet. Kör eller rulla aldrig upp på ramperna.
- Försök inte lyfta ett fordon som ligger direkt på rampen i bottenläget. Lyften kräver lite utrymme mellan marken och ditt fordon för att bygga upp tillräckligt med tryck för att lyfta det.
- Se till att inga personer befinner sig i arbetsområdet vid höjning och sänkning av lyften.
- Gå ej under lyften innan säkerhetspärren har gripit in.
- Det är inte tillåtet att stå eller klättra på lyften eller fordonet, eller att placera verktyg, materiel eller andra föremål på dessa.
- Elskåp och ledningar ska skyddas från vatten.

Underhåll

VARNING: koppla bort strömmen innan du utför något underhåll!

Dagligen:

- Kontrollera säkerhetslås visuellt innan hantering av lyft
- Kontrollera hydrauliska kopplingar och slangar för läckage.
- Kontrollera bultar, skruvar och muttrar innan användning.

Veckovis:

- Kontrollera att de rörliga delarna och glidytorna är rengjorda.
- Kontrollera oljenivån i tanken.



Smörjpunkter

Smörj vid behov. Lyften är smörjd vid leverans.

Ställ lyfttrampen lite på sidan och smörj rörliga delar med hjälp av en oljekanna.



Månadsvis:

- Kontrollera att de rörliga delarna är rengjorda.
- Kontrollera hydrauliksystemet och spänn om nödvändigt åt hydraulkopplingarna.
- Kontrollera slitage på stag och valsar.
- Kontrollera slitage på lyftarmen och relevanta förlängare.

Årskontroll

- Kontrollera alla bärande axlar och bussningar.
- Kontrollera hydraulikslangar, ventiler, anslutningar och fastsättningar.
- Grundlig smörjning av axlar.
- Byt hydraulolja (VG32) i oljetanken.

EG FÖRSÄKRAN OM ÖVERENSSTÄMMELSE

2006/42/EC (MD)

ORIGINAL DEKLARATION

Vi, tillverkaren

Företag: Verktygsboden Erfilux AB
Adress: Källbäckstrydsgatan 1, SE-507 42 Borås, Sweden
Telefon: +46-33-2026 53

intygar att konstruktion och tillverkning av denna produkt marknadsförd under varumärket PELA

Maskin: LD-A05014E
Typbeteckning: Hydraulisk lyftramp 2500 Kg
Artikelnummer: 513949

följer alla relevanta bestämmelser i enlighet med Maskindirektivet 2006/42/EC (MD).

För att tillmötesgå ovan nämnt direktiv har följande harmoniserade standarder använts:

Standard:

EN ISO 12100:2010 EN 1493:2010

Notified body: Alberk QA International Technical Control and Certification Corp.
ID nummer: 2138
Adress: Barbaros Mahallesi Ak Zambak Sokak A Blok Kat: 19 No: 2 Ataşehir
Istanbul, Turkey
Certifikatsnummer: QA-AC-4343/19

Denna produkt var CE märkt år: 2021

Person som är behörig att ställa samman den tekniska dokumentationen, och är etablerad i Europeiska gemenskapen:

Namn: Lars Edwardsson
Adress: Källbäckstrydsgatan 1, SE-507 42 Borås, Sweden

Denna deklaration gäller uteslutande för produkten i det utförande den placerades på marknaden och exkluderar komponenter som tillförs nu och/eller vid senare tillfälle av slutkunden.

Stad och land: Borås, Sverige Datum: 24/08/2021



Namn: Ted Berglund
Befattning: Inköpskoordinator

VERKTYGSBODEN



Contact

PELA Tools
Solängsvägen 13
SE-513 70 Borås
Phone: 033-202650
E-mail: order@pelatools.com

Environmental protection / Scrapping

Recycle any unwanted material, do not throw it in the household rubbish. All machines, accessories and packaging must be sorted and left at a recycling center and disposed of in an environmentally friendly manner.



General safety instructions

When working with machines, the following points should always be considered. Also observe the safety regulations of the workplace and respect all the laws, rules and regulations that apply where the machine is used.

- Clean often. Dust, waste and debris in a work-place increase the risk of accident, fire and explosion.
- Do not work in dark or poor lighting.
- Never store explosive or flammable liquids and gases within the work area.
- Keep children out of the work area.
- Pay special attention to the machine's warning symbols.
- Do not use the machine if you are tired or under the influence of drugs, alcohol or medication.
- If necessary, use protective equipment such as respiratory protection, protective gloves, hearing protection and goggles.
- Wear suitable work clothes and non-slip shoes for the purpose. Use hair nets if you have long hair, do not wear jewelry or loose-fitting clothing that can get caught.
- Never let your experience of the machine lead to carelessness.
- Check that all guards are in place and in good working order. Check that all machine parts are intact and correctly mounted.

Safety instructions

The manufacturer accepts no responsibility for accidents and injuries to persons or equipment caused by improper use.

The electrical installation must be carried out by an electrician with a license for current work. Follow the instructions and warning texts on installation, use and maintenance in this manual. Let the manual be near the equipment at all times.

WARNING

- Do not exceed the maximum permissible load capacity (2500 KG/5500 LB).
- Always lift towards the heaviest part of the car. Usually with the pump unit placed behind the car when the engine is placed in front.
- The vehicle must be switched off when it is hoisted up in the lift.
- Place the lifting frames in the desired location with both lock bars on the outside.
- The lock bars must be able to move freely along the bottom of their Channels; they must not stay up in the air when you raise the Frames (if they do, the most likely problem is that the lock bar bolt is over-tightened).
- Place the ramps under the vehicle. Never drive or roll up on the ramps.
- Do not try to raise a load at no net rise. Your lift requires some space between the ground and your vehicle to build up enough pressure to raise a load. It cannot raise a full load from a completely flat starting position
- Make sure that no people stand in the work area when raising and lowering the lift.
- Do not go under the lift until the safety catch has engaged.
- It is not permitted to stand or climb on the lift or vehicle, or to place tools, equipment or other objects on them.
- Electrical cabinets and wiring must be protected from water.

OBS

Read the user manual carefully before use.


Make sure all users read and understand this manual.

The lift is only approved for installation and indoor use. Outdoor installation is prohibited.

Assembly instructions



Mount the plate with wheel axle and socket for handles on the back of the pump unit. Use the supplied 4 screws and nuts.

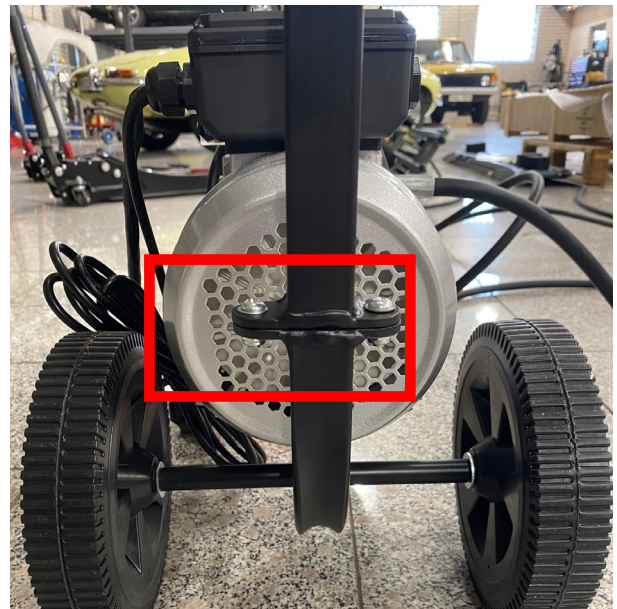

Mount on the handle with the included two screws, nuts and washers.



Mount on the wheels. First place the washer on the wheel axle, then the wheel with the concave side outwards. Attach then the wheel with the locking ring.



Remove the yellow plug from the pump housing and attach the hydraulic hose. **Check that the gasket is not stuck on the plug.** Tighten properly.



Connect the hydraulic hose to the two lifting ramps with the quick couplings. **Check that it fits properly.**



Fill the hydraulic tank with approx. 4 liters of hydraulic oil, VG32.


For more information about installation and use, see our videos at verktygsboden.se

Instructions

Lift: Always make sure that the vehicle is correctly positioned on the lifting ramp. Lift the ramps with the  on the controller.

Lower: Release the safety catches. Lower the ramps with  on the controller.

Parking mode: Lower until the safety catches engage. The lifting ramp is now fixed.

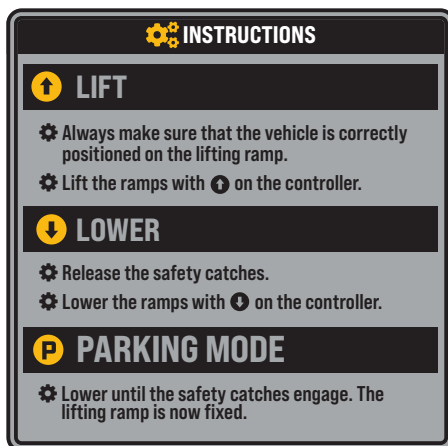

WARNING

- Do not exceed the maximum permissible load capacity (2500 KG/5500 LB).
- Always lift towards the heaviest part of the car. Usually with the pump unit placed behind the car when the engine is placed in front.
- The vehicle must be switched off when it is hoisted up in the lift.
- Place the lifting frames in the desired location with both lock bars on the outside.
- The lock bars must be able to move freely along the bottom of their Channels; they must not stay up in the air when you raise the Frames (if they do, the most likely problem is that the lock bar bolt is over-tightened).
- Place the ramps under the vehicle. Never drive or roll up on the ramps.
- Do not try to raise a load at no net rise. Your lift requires some space between the ground and your vehicle to build up enough pressure to raise a load. It cannot raise a full load from a completely flat starting position
- Make sure that no people stand in the work area when raising and lowering the lift.
- Do not go under the lift until the safety catch has engaged.
- It is not permitted to stand or climb on the lift or vehicle, or to place tools, equipment or other objects on them.
- Electrical cabinets and wiring must be protected from water.

Maintenance

WARNING: disconnect power before performing any maintenance!

Daily:

- Visually inspect the safety lock before handling the lift
- Check hydraulic fittings and hoses for leaks.
- Check bolts, screws and nuts before use.

Weekly:

- Check that the moving parts and sliding surfaces are cleaned.
- Check the oil level in the tank.



Lubrication points

Lubricate if necessary. The lift is lubricated on delivery.

Place the lifting ramp slightly on the side and lubricate all moving parts with the help of an oil jug.



Monthly:

- Check that the moving parts are cleaned.
- Check the hydraulic system and tighten the hydraulic couplings if necessary.
- Check wear on struts and rollers.
- Check wear on the lifting arm and relevant extensions.

Annual inspection

- Check all load-bearing shafts and bushings.
- Check hydraulic hoses, valves, connections and fasteners.
- Thorough lubrication of shoulders.
- Change hydraulic oil (VG32) in the oil tank.

EU Declaration of Conformity

2006/42/EC (MD)

ORIGINAL Declaration of conformity

We, the manufacturer

Company: Verktysboden Erfilux AB
Address: Källbäckstrydsgatan 1, SE-507 42 Borås, Sweden
Telephone number: +46-33-2026 53

Declare under our sole responsibility that the product

Machine: LD-A05014E
Type designation: Car ramp 2500Kg
Item number: 513949

fulfils all relevant provisions of the Machinery directive 2006/42/EC (MD)

To show compliance with the above Directives the following harmonized standards have been applied:

Standards:

EN ISO 12100:2010 EN 1493:2010

Notified body: Alberk QA International Technical Control and Certification Corp.
ID number: 2138
Address: Barbaros Mahallesi Ak Zambak Sokak A Blok Kat: 19 No: 2 Ataşehir
Istanbul, Turkey
Certificate number: QA-AC-4343/19

This product was CE marked year: 2021

Person authorized to compile the technical file:

Namn: Lars Edwardsson
Adress: Källbäckstrydsgatan 1, SE-507 42 Borås, Sweden

This declaration relates to the machinery in the state in which it was placed on the market, and excludes components which are added and/or operations carried out subsequently by the final user.

City and Country: Borås, Sverige Date: 24/08/2021



Name: Ted Berglund
Position: Purchasing coordinator

VERKTYGSBODEN



